 


CC BUDS PRO

 
INSTRUCTIONS

PLEASE READ ALL THE INSTRUCTIONS COMPLETELY BEFORE USE AND SAVE THIS MANUAL FOR FUTURE REFERENCE

Handling Care



To remove currently installed tip: Use your thumb to gently push from the back on just one side. It should gently come off at an angle without damaging the foam. Silicone tips need to be pinched at the bottom for grip.



To install new tip: Press the edge of the plastic stem against the center hole. Next, press and rotate the tip until it is fully positioned on the stem.

Specifications

SENSITIVITY: 107 dB FREQUENCY: 20-20,000 Hz
DRIVER UNIT: 10mm CABLE LENGTH: 48"

IMPEDANCE: 32 Ohm WARRANTY: One Year

^{*} Removing the foam tip cushions may reduce longevity. Pulling on cord to remove earbuds may eventually damage the internal wires causing failure. Please remove the earbuds by gripping the stem base and pulling gently.